



# Petrol Bag Finder

## Find your next Petrol Bag in just three clicks

You can find the ideal Petrol Bag for your camera and the way you work in just three clicks:

**Click 1:** Choose your camera Manufacturer by clicking on their logo opposite.

**Click 2:** We will display popular cameras from your Manufacturer; just click on the camera that interests you.

**Click 3:** We will display suitable Petrol Bags; just click on the bag you want for more info at [www.petrolbags.com](http://www.petrolbags.com).

## Discover Petrol Bags online



Click here for our online brochure



Click here for our videos on YouTube



Click here for our news on Facebook



Petrol Bag hand luggage.



Blackmagicdesign 



Red





Alexa



Alexa Plus



Alexa M



Alexa Studio



Cinema Camera

[Return to Main Menu](#)

# Canon

Canon

If your camera is not here please contact us for assistance.



C100



C300



C500



5D



7D



GL-1



GL-2



HV-10



HV-20



XA10



XF100



XF105



XF 300



XF 305

[Return to Main Menu](#)

VITEC Videocom



HDK-55



HDK-97A



HL-65W



NAC Hi-Motion II

# JVC



GY-HM100



GY-HM150U



GY-HM750U

[Return to Main Menu](#)



D4



D800 / 800E



D600

[Return to Main Menu](#)

# Panasonic



AG-AC90



AG-AC130



AG-AC160



AG-AF100



AG-HMC 150



AG-HMC40



AG-HMC80



AG-HPX250



AG-HPX171



AG-HPX370

[Return to Main Menu](#)





Flex



65



HD Gold



Miro 3



Miro M / LC  
family



V10



V1210 & 1610  
family



V462 Broadcast



Scarlet



One



EPIC

If your camera is not here please contact us for assistance.

# SONY



DSR-PD175P



F3



HDR-AX2000



HSC 300



HVR-HD1000



HVR-Z5E



HXR-MC2000E



HXR-MC50E



HXR-NX5E



HXR-NX30



HXR-NX70



NEX FS100



NEX FS700



NEX-VG10



PMW-EX1R



PMW-EX3



PMW 100



PMW 150



PMW 200



PMW-320K



PMW-350L



PMW-500

[Return to Main Menu](#)



This page is a guide to the Petrol Bags that maybe suitable for use as hand luggage on airlines. Please check the hand luggage policy of your specific airline before purchasing and travelling with your Petrol Bag.



PC001 & PC002  
Shoulder Bags



PC201  
Shoulder Bag



PC202  
Shoulder Bag



PC300  
Backpack



PC301  
Backpack



PC302  
Trolley Bag



PC305  
Trolley Bag



PD221  
Shoulder Bag



PD333  
Backpack



PD334  
Backpack



PD336  
Backpack



PD620  
Trolley Bag

[Return to Main Menu](#)



PC201 Shoulder Bag



PD 620 Trolley Bag



PC102 Shoulder Bag



Alexa



PA1001  
Snaplock trolley



PC003 Shoulder Bag



PC301 Backpack



PC201 Shoulder Bag



Alexa Plus



PD 620 Trolley Bag



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PA1001  
Snaplock  
trolley



PC201 Shoulder Bag



PC202 Shoulder Bag



PD 620 Trolley Bag



PC005 Shoulder Bag



Alexa M



PC102 Shoulder Bag



PC301 Backpack



PA1001  
Snaplock trolley

PC201 Shoulder Bag



PD 620 Trolley Bag



PC004 Shoulder Bag



Alexa Studio



PC102 Shoulder Bag



PC301 Backpack



PA1001 Snaplock trolley



Blackmagicdesign



PC301 Backpack



Cinema Camera



PD 620 Trolley Bag



PC003 Shoulder Bag



PC002 Shoulder Bag



PC302 Trolley Bag



PA1001  
Snaplock trolley

[Return to Main Menu](#)

# Canon

Canon  
GL-1



PC201  
Shoulder Bag



PC300 Backpack



PC001 Shoulder Bag



GL-1



PC302 Trolley Bag



PC002 Shoulder Bag



PD405 rain cover

[Return to Main Menu](#)

# Canon

Canon  
GL-2



PC001 Shoulder Bag



PC201  
Shoulder Bag



GL-2



PA1001  
Snaplock trolley



PC002 Shoulder Bag



PD405 rain cover



PC202 Shoulder Bag

[Return to Main Menu](#)

# Canon

Canon HV-10



PA1001  
Snaplock trolley



HV-10



PC002 Shoulder Bag



PC001 Shoulder Bag

[Return to Main Menu](#)

# Canon

Canon HV-20



PC001 Shoulder Bag



HV-20

PA1001  
Snaplock trolley



PC002 Shoulder Bag

[Return to Main Menu](#)

# Canon

Canon  
C100



PD443 Shoulder Bag



C100



PD336 Backpack



PD221 Shoulder Bag



PD334 Backpack



PD337 Trolley Bag



PA1001  
Snaplock trolley

[Return to Main Menu](#)

VITEC Videocom

# Canon

Canon  
C300



PD443 Shoulder Bag



C300



PD336 Backpack



PD221 Shoulder Bag



PD334 Backpack



PD337 Trolley Bag



PA1001  
Snaplock trolley

[Return to Main Menu](#)

# Canon

Canon  
C500



PD443 Shoulder Bag



C500



PD336 Back



PD221 Shoulder Bag



PD334 Backpack



PD337 Trolley Bag



PA1001  
Snaplock trolley

[Return to Main Menu](#)



# Canon

Canon 5D



PD443 Shoulder Bag



PD334 Backpack



PD336 Backpack



PD221 Shoulder Bag



5D



PD510 Raincover



PD515 Rain cover



PD337 Trolley Bag



PA1001  
Snaplock trolley

[Return to Main Menu](#)

# Canon

Canon 7D



PD443 Shoulder Bag



PD334 Backpack



PD336 Backpack



PD221 Shoulder Bag



7D



PD337 Trolley Bag



PA1001  
Snaplock trolley



PD510 Raincover



PD515 Rain cover

[Return to Main Menu](#)

# Canon

Canon  
XA10



PC001 Shoulder Bag

PC300 Backpack



XA10



PD405 rain cover

PC302 Trolley Bag



[Return to Main Menu](#)

# Canon

Canon  
XF100



PC001 Shoulder Bag

PC300 Backpack



XF100



PD405 rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# Canon

Canon  
XF105



PC001 Shoulder Bag

PC300 Backpack



XF105



PD405 rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# Canon

Canon  
XF 300



PC202 Shoulder Bag



PC301 Backpack



PC300 Backpack



XF 300

PR410 rain cover



PA1001  
Snaplock trolley



PC003 Shoulder Bag



PC302 Trolley Bag

[Return to Main Menu](#)

# Canon

Canon XF 305



PC202 Shoulder Bag



PC301 Backpack



PC300 Backpack



XF 305

PR410 rain cover



PC003 Shoulder Bag



PA1001  
Snaplock trolley



PC302 Trolley Bag

[Return to Main Menu](#)

# Ikegami



PC006 Shoulder Bag



PC005 Shoulder Bag



HDK-55



PA1001 Snaplock trolley



PC103 Shoulder Bag



PR425 rain cover



PC104 U Bag

[Return to Main Menu](#)



# Ikegami



PC006 Shoulder Bag



HDK-97A



PC005  
Shoulder Bag



PC103  
Shoulder Bag



PR425  
rain cover



PC104  
Trolley Bag



PA1001  
Snaplock  
trolley

[Return to Main Menu](#)

# Ikegami



PC006 Shoulder Bag



HL-65W



PC005  
Shoulder Bag



PC103  
Shoulder Bag



PR425  
rain cover



PC104  
Trolley Bag



PA1001  
Snaplock  
trolley

[Return to Main Menu](#)

# Ikegami



PC006 Shoulder Bag



NAC Hi-Motion II



PC005 Shoulder Bag



PC103 Shoulder Bag



PR425 rain cover



PC104 Trolley Bag

PA1001 Snaplock trolley

[Return to Main Menu](#)

# JVC

**JVC**  
GY-HM100



PC201  
Shoulder Bag



PC300 Backpack



PC001 Shoulder Bag



GY-HM100



PC002 Shoulder Bag



PD405 rain cover



PC302 Trolley Bag

PA1001  
Snaplock trolley

[Return to Main Menu](#)

VITEC Videocom

# JVC

**JVC**  
GY-HM150U



PC201 Shoulder Bag



PC300 Backpack



PC001 Shoulder Bag



GY-HM150U



PC002 Shoulder Bag



PD405 rain cover



PC302 Trolley Bag



PA1001  
Snaplock trolley

[Return to Main Menu](#)

VITEC Videocom

# JVC

**JVC**  
GY-HM750U



PC206 Shoulder Bag



GY-HM750U



PC303  
Backpack



PA1001  
Snaplock trolley



PC004 & PC005 Shoulder Bag



PC102 Shoulder Bag



PR415  
rain cover

[Return to Main Menu](#)



D4



PD443 Shoulder Bag



PD334 Backpack



PD336 Backpack



PD221 Shoulder Bag



D4



PD510 Raincover



PD515 Rain cover



PD337 Trolley Bag



PA1001  
Snaplock trolley

[Return to Main Menu](#)



D800



PD443 Shoulder Bag



PD334 Backpack



PD336 Backpack



PD221 Shoulder Bag



D800



PD337 Trolley Bag



PA1001 Snaplock trolley



PD510 Raincover



PD515 Rain cover

[Return to Main Menu](#)





D600



PD443 Shoulder Bag



PD334 Backpack



PD336 Backpack



PD221 Shoulder Bag



D600



PA1001  
Snaplock trolley



PD510 Raincover



PD515 Rain cover



PD337 Trolley Bag

[Return to Main Menu](#)



PC303 Back pack



PC202 Shoulder Bag



AG-AC90



PC004 Shoulder Bag



PR410  
rain cover



PC104 U Bag



PC303 Back pack



PC202 Shoulder Bag



AG-AC130



PC004 Shoulder Bag



PR410  
rain cover



PC104 U Bag

[Return to Main Menu](#)



PC303 Back pack



PC202 Shoulder Bag



AG-AC160



PC004 Shoulder Bag



PR410  
rain cover



PC104 U Bag

# Panasonic®

Panasonic AG-HPX250



PC201 Shoulder Bag



PC301 Backpack



PC300 Backpack



AG-HPX250



PC003 Shoulder Bag



PR410 rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# Panasonic

Panasonic AG-HMC 150



PC202 Shoulder Bag



PC301 Backpack



PC300 Backpack



AG-HMC 150



PC003 Shoulder Bag



PR410 rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# Panasonic®



PC202 Shoulder Bag



PC301 Backpack



PC300 Backpack



AG-HPX171



PC003 Shoulder Bag



PR410 rain cover



PC302 Trolley Bag

Panasonic AG-HPX171

[Return to Main Menu](#)

VITEC Videocom

# Panasonic

Panasonic AG-AF100



PC202 Shoulder Bag



AG-AF100



PC301 Backpack



PC003 Shoulder Bag



PR410 rain cover



PC302 Trolley Bag

[Return to Main Menu](#)



# Panasonic®



PC201  
Shoulder Bag



PC300 Backpack



PC001 Shoulder Bag



AG-HMC40



PC002 Shoulder Bag



PD405 rain cover



PC302 Trolley Bag

Panasonic  
AG-HMC40

[Return to Main Menu](#)

VITEC Videocom



PC206 Shoulder Bag



AG-HMC80



PC303 Backpack



PA1001  
Snaplock  
trolley



PC004 Shoulder Bag



PC102 Shoulder Bag



PR415  
rain cover

# Panasonic



PC006 Shoulder Bag



AG-HPX370



PC005  
Shoulder Bag



PC103  
Shoulder Bag



PR425  
rain cover



PC104  
Trolley Bag



PA1001  
Snaplock  
trolley

[Return to Main Menu](#)



PC002 Shoulder Bag



PC201 Shoulder Bag



PC202 Shoulder Bag



PD 620 Trolley Bag



Flex



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC302 Trolley Bag



PA1001 Snaplock trolley

[Return to Main Menu](#)



PC002 Shoulder Bag



PC201 Shoulder Bag



PC202 Shoulder Bag



PD 620 Trolley Bag



65



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC302 Trolley Bag



PA1001 Snaplock trolley

[Return to Main Menu](#)



PC201 Shoulder Bag



PC202 Shoulder Bag



PD 620 Trolley Bag



PC002 Shoulder Bag



HD Gold



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PA1001  
Snaplock  
trolley

[Return to Main Menu](#)



PC002 Shoulder Bag



PC201 Shoulder Bag



PC202 Shoulder Bag



PA1001  
Snaplock  
trolley



Miro 3



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC302 Trolley Bag

[Return to Main Menu](#)



PC002 Shoulder Bag



PC201 Shoulder Bag



PC202 Shoulder Bag



Miro M / LC family



PD 620 Trolley Bag



PA1001 Snaplock trolley



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC302 Trolley Bag

[Return to Main Menu](#)





PC002 Shoulder Bag



PC201 Shoulder Bag



PC202 Shoulder Bag



PD 620 Trolley Bag



PA1001 Snaplock trolley



V10



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC302 Trolley Bag

[Return to Main Menu](#)



PC002 Shoulder Bag



PC201 Shoulder Bag



PC202 Shoulder Bag



PD 620 Trolley Bag



V1210 & 1610 family

PA1001  
Snaplock trolley



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC302 Trolley Bag

[Return to Main Menu](#)



PC202 Shoulder Bag



PD 620 Trolley Bag



PC201 Shoulder Bag

PC002 Shoulder Bag



V462 Broadcast

PA1001  
Snaplock trolley



PC102 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC302 Trolley Bag

[Return to Main Menu](#)



Scarlet

If you want a Petrol Bag for your Scarlet camera your choice will vary on your exact configuration. Please contact us or talk to your Supplier.



PA1001



PD 620 Trolley Bag



Scarlet



PC006 Shoulder Bag



PC005 Shoulder Bag



PC001 Shoulder Bag



PC002 Shoulder Bag



PC003 Shoulder Bag



PC004 Shoulder Bag

[Return to Main Menu](#)



If you want a Petrol Bag for your Red One camera your choice will vary on your exact configuration. Please contact us or talk to your Supplier if you would like any assistance.



One



PA1003 - we list it as an accessory bag but with it's dividers rearranged its excellent for large camera protection.



EPIC



If you want a Petrol Bag for your EPIC camera your choice will vary on your exact configuration. Please contact us or talk to your Supplier.



PA1001  
Snaplock trolley



PD 620  
Trolley Bag



EPIC



PC006 Shoulder Bag



PC005 Shoulder Bag



PC001 Shoulder Bag



PC002 Shoulder Bag



PC003 Shoulder Bag



PC004 Shoulder Bag

[Return to Main Menu](#)

# SONY

PC006  
Shoulder Bag



HSC 300



PC005 Shoulder Bag



PR425  
rain cover



PA1001  
Snaplock trolley



PC103 Shoulder Bag

[Return to Main Menu](#)

# SONY

PC006  
Shoulder Bag



PMW-500



PC005 Shoulder Bag



PR425  
rain cover



PA1001  
Snaplock  
trolley



PC103 Shoulder Bag

[Return to Main Menu](#)



# SONY

SONY  
PMW-350L

PC006  
Shoulder Bag



PMW-350



PC005 Shoulder Bag



PR425  
rain cover



PA1001  
Snaplock  
trolley



PC103 Shoulder Bag

[Return to Main Menu](#)

# SONY



PC006  
Shoulder Bag



PMW-320K



PC005 Shoulder Bag



PR425  
rain cover



PA1001  
Snaplock  
trolley



PC103 Shoulder Bag

[Return to Main Menu](#)

# SONY

SONY HXR-NX70



PC201  
Shoulder Bag



PC300 Backpack



PC001 Shoulder Bag



HXR-NX70



PC002 Shoulder Bag



PD405 rain cover



PA1001  
Snaplock  
trolley



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY

SONY HVR-HD1000



PC206 Shoulder Bag



HVR-HD1000



PC303 Backpack



PA1001  
Snaplock  
trolley



PC004 Shoulder Bag



PC102 Shoulder Bag



PR415  
rain cover

[Return to Main Menu](#)

# SONY



PC202 Shoulder Bag



PC300 Backpack



PC301 Backpack



PA1001  
Snaplock  
trolley



HDR-AX2000



PR410  
rain cover



PC302 Trolley Bag

# SONY



PC301 Backpack



PC201 Shoulder Bag



PC300 Backpack



PA1001 Snaplock trolley



PC001 Shoulder Bag



HXR-MC50E



PS608 Shoulder Bag



PR410 rain cover



PC302 Trolley Bag

SONY HXR-MC50E

[Return to Main Menu](#)

# SONY



PC201 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC300 Backpack



PA1001  
Snaplock  
trolley



NEX-VG10



PR410 rain cover



PC302 Trolley Bag

SONY NEX-VG10

[Return to Main Menu](#)

# SONY

SONY HXR-NX5E



PC202 Shoulder Bag



PC301 Backpack



PC300 Backpack



HXR-NX5E



PR410 rain cover



PA1001 Snaplock trolley



PC302 Trolley Bag



PC003 Shoulder Bag

[Return to Main Menu](#)



# SONY

SONY HXR-NX30



PC202 Shoulder Bag



PC301 Backpack



PC300 Backpack



HXR-NX30



PC003 Shoulder Bag



PR410  
rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY



PC301  
Backpac



PC300  
Backpack



PC202 Shoulder Bag



HVR-Z5E



PA1001  
Snaplock  
trolley



PC003 Shoulder Bag



PR410  
rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY



PC202 Shoulder Bag



PC003 Shoulder Bag



PC301 Backpack



PC300 Backpack



DSR-PD175P



PR410 rain cover



PA1001 Snaplock trolley



PC302 Trolley Bag

SONY DSR-PD175P

[Return to Main Menu](#)

# SONY

SONY  
PMW-EX1R



PC202 Shoulder Bag



PC300 Backpack

PC301 Backpack



PMW-EX1R



PA1001

Snaplock trolley



PC003 Shoulder Bag



PR410 rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY



PC202 & PC206  
Shoulder Bags



PC003 & PC004 Shoulder Bags



PC301  
Backpack



PC300 Backpack



NEX-FS100



PR410  
rain cover



PA1001  
Snaplock trolley



PC302 Trolley Bag

SONY NEX-FS100

[Return to Main Menu](#)

# SONY

SONY NEX-FS100



PC202 & PC206 Shoulder Bags



PC003 & PC004 Shoulder Bags



PC301 Backpack



PC300 Backpack



PA1001 Snaplock trolley



NEX-FS100



PR410 rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY

SONY NEX-FS700



PC202 Shoulder Bag



PC301 Backpack



PC300 Backpack



NEX FS700



PC003 Shoulder Bag



PR410 rain cover



PA1001 Snaplock trolley



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY

SONY  
F3



PC202 & PC206  
Shoulder Bags



PC301  
Backpack



PC300 Backpack



PA1001  
Snaplock trolley



F3



PC003 & PC004 Shoulder Bags



PR410 rain cover



PC302 Trolley Bag

[Return to Main Menu](#)



# SONY

SONY HXR-MC2000E



PC206  
Shoulder Bag



PC301  
Backpack



PC303  
Backpack



PA1001  
Snaplock trolley



PC 201  
Shoulder Bag



HXR-MC2000E



PC104 Trolley Bag



PC004 Shoulder Bag



PR425  
rain cover



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY

SONY HVR-HD1000



PC206 Shoulder Bag



PMW-EX3



PC303 Backpack



PA1001  
Snaplock  
trolley



PC004 & PC005  
Shoulder Bags



PC102 Shoulder Bag

PR415  
rain cover



[Return to Main Menu](#)

# SONY

SONY  
PMW 200



PC202 Shoulder Bag



PC301  
Backpack



PC300 Backpack



PMW 100



PR410  
rain cover



PA1001  
Snaplock  
trolley



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY

SONY  
PMW 200



PC202 Shoulder Bag



PC301  
Backpack



PC300 Backpack



PMW 150



PR410  
rain cover



PA1001  
Snaplock  
trolley



PC302 Trolley Bag

[Return to Main Menu](#)

# SONY

SONY  
PMW 200



PC202 Shoulder Bag



PC301  
Backpack



PC300 Backpack



PMW 200



PR410  
rain cover



PA1001  
Snaplock  
trolley



PC003 Shoulder Bag



PC302 Trolley Bag

[Return to Main Menu](#)